


# SEIP MOTOR

## Remote Program Instructions SKR433-1

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the “Learn” button then let go.
3. The LED light on the receiver illuminates or blinks.
4. Press a button on your new remote control for 1 second.
5. Let the button go.
6. The LED light on the receiver turns off

*Handset is now set!*

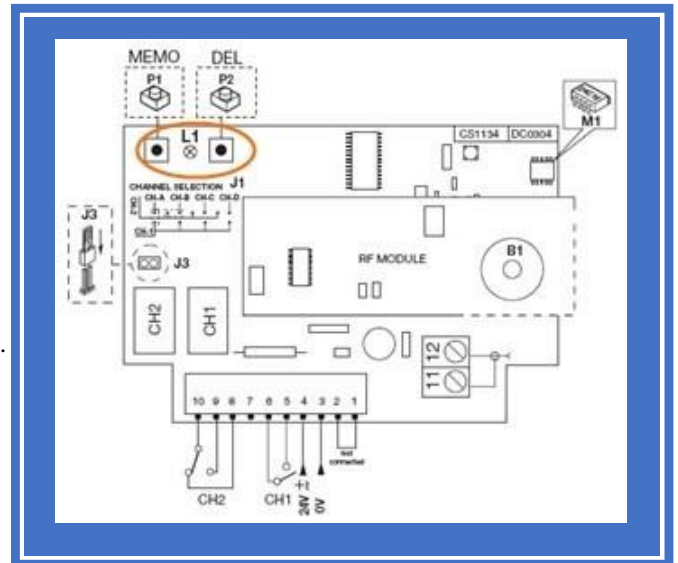

Please note: if programming button of receiver remains pressed down too long, the programming code of all remote controls that have already been programmed will be released.